


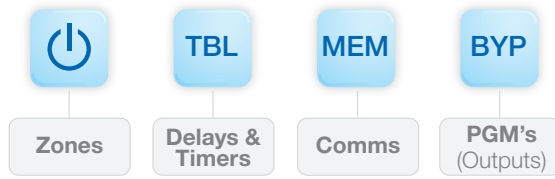
Quick Menu Driven Programming

How to enter Quick Menu

1. Press the 
2. Installer code
(default: 0 0 0 0)

Select menu below


(tip : You can jump between menu's by pressing the keys below)




BYP **Zones**
Power button flashing
(flashing)
Select Zone to program / modify



01
to
16




ARM  (flashing)
Hardwired or Wireless
Press enter **ENTER**
for hardwired
OR
Trigger tamper
switch to enroll wireless device.



SLEEP  (flashing)
PGMType / Definition
Enter 1 digit zone definition
number from chart on right


1 = Follow Button  or ●	5 = Follow Bell
2 = Follow Button  or ●●	6 = Follow Arm
3 = Follow Zone	7 = Follow Stay arm
4 = Follow Alarm	8 = Follow Sleep arm



STAY  (flashing)
PGMTimer
Enter 1 digit zone definition
number from chart on right

1 = Follow	4 = 15 seconds	7 = 5 minutes
2 = 1 second	5 = 30 seconds	8 = 15 minutes
3 = 5 seconds	6 = 1 minute	9 = 30 minutes



OFF  (flashing)
PGM Options

If PGM type is 1, or 2 [2-DIGIT REMOTE CONTROL #] 01 to 32; 00 = all remote controls.
Goes to next available PGM.

If PGM type is 3 [2-DIGIT ZONE #] 01 to 32; 00 = all zones.
Goes to next available PGM.

If PGM type is 4 [1] and/or [2] + **ENTER** If system is partitioned, select partition(s) and press **ENTER**.
Goes to next available PGM.

