


# Quick Menu Driven Programming


How to enter Quick Menu

1. Press the 

2. Installer code  
( default: 0 0 0 0 )

Select menu below

(tip : You can jump between menu's by pressing the keys below)

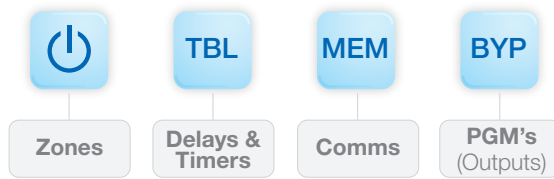


Press **1** **For Entry Delay**  
Enter three digit number  
\_ \_ \_ Sec  
Default 0 3 0 sec

Press **6** **For Walk Test** (activate walk test)  
Sirens will chirp once for open  
twice for zone close.  
  
Default 0.30 sec



Press **2** **For Entry Delay Two**  
Enter three digit number  
\_ \_ \_ Sec  
Default 0 6 0 sec

Press **7** **For Installer Code**  
Enter four digit code  
Default 0 0 0 0  
  
ARM \_ \_ \_ \_  
(Confirm code)  
  
SLEEP \_ \_ \_ \_  
(Re-enter four digit code)

Press **3** **For Exit Delay**  
Enter three digit number  
\_ \_ \_ Sec  
Default 0 6 0 Sec  
ARM light flashing  (flashing)

Press **8** **For Maintenance Code**  
Enter four digit code  
Default EMPTY  
  
ARM \_ \_ \_ \_  
  
SLEEP \_ \_ \_ \_  
(Re-enter four digit code)

Press **4** **For Bell Cut Off**  
Enter three digit number  
\_ \_ \_ Min  
Default 0 0 4 Min

Press **9** **For Winload Software ID & Password**  
(Remote installer login) Default EMPTY  
  
ARM Press     
  
SLEEP Panel ID (enter four digit code)  
\_ \_ \_ \_  
  
STAY PC Password (enter four digit code)  
\_ \_ \_ \_

Press **5** ARM light flashing  (flashing)  
**For Date & Time**  
Enter time (4 digits)  
\_ \_ : \_ \_  
Note: if "1" "2" or "3" flash it is asking for: 1= 24hr format  
2= AM  
4= PM  
Sleep light Enter Year (four digits)  
\_ \_ \_ \_  
Stay light Enter Month (two digits)  
\_ \_  
Off light Enter Month (two digits)  
\_ \_